



“Setting the World’s Performance Standards”

743 E. Iona Road, Idaho Falls, ID 83401, (208) 529-0244 Fax (208) 529-9000

SLP Performance Muffler for 2016-20 Polaris RZR XP Turbo & RZR-4 XP Turbo Part# 09-118

This product is legal for closed-course competition use only
Read entire instruction before beginning install

Kit Contents:

- 1 - SLP Performance Muffler (#090-1181)
- 1 - Spring Tab (#090-697)
- 1 - SLP Decal (#60-60)
- 1 - Installation Instructions (#015-09118)
- 2 - Interchangeable Emblems
- 4 - Stainless Steel Allen Bolts

Tools Required:

- T40 Torx Socket
- 6” Extension Spring Hook Tool
- Ratchet
- Short Socket Extension
- 13mm Socket
- 10mm Socket
- Torque Wrench
- 3/32” Allen Wrench

Installation:

1. Using ratchet and T40 torx socket, remove four screws from the rear muffler cover and remove rear muffler cover from RZR.
Note: If equipped with optional rear bumper, it may need to be removed and re-installed once SLP muffler install is complete.

2. Remove four brackets that hold the the rear muffler cover in place.

Note: Muffler cover and brackets will not be reused.


3. Using a 13mm socket and ratchet, remove three nuts from muffler to header joint. While supporting stock muffler, unhook two springs using a spring hook tool (#20-90) and then remove stock muffler.

Note: Retain stock exhaust nuts, springs and gasket.

4. Remove the driver side stock muffler retention spring from RZR frame.

Note: Leave the upper spring attached to the frame.

5. Remove the bottom nut on the rear end mount (see illustration #1) and install the provided spring tab pointing down.

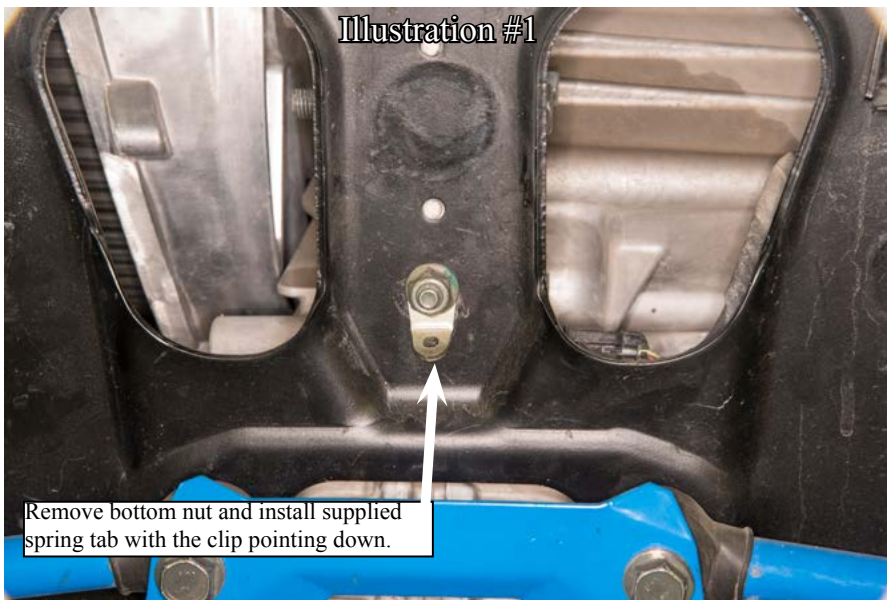

Starting Line Products • 743 E. Iona Rd. Idaho Falls, ID 83401
Sales (208)529-0244 • Fax (208)529-9000 • e-mail: slp@slp.cc

For instructions in color please visit us on the web @ www.startinglineproducts.com

6. Using stock spring removed in step #4, hook spring into SLP spring tab installed in step #5.

7. Install the stock exhaust gasket onto the header then install SLP muffler. Torque nuts to 25 ft/lbs (34Nm). Finish springing the muffler into place using stock springs.

Note: Do not reinstall the rear muffler cover removed in step #1.

8. Once the muffler is installed, using the provided allen head bolts and 3/32" allen wrench, install the emblem of your choice.

Note: For optional spark arrestors, order qty 2 of SLP# 090-1180

Fueling: No additional fueling modifications required.
91 octane fuel recommended.



Also available for the RZR Turbo:

Clutch Kits



PV3 Tuner



Intake Kits



Heavy Duty Axles



Specialty Service Tools



Drive Clutch Covers



Stage Kits



Power Pucks



Belt Temp Gauges



Starting Line Products • 743 E. Iona Rd. Idaho Falls, ID 83401
Sales (208)529-0244 • Fax (208)529-9000 • e-mail: slp@slp.cc
For instructions in color please visit us on the web @ www.startinglineproducts.com